

## Release Notes for DrayTek Vigor2866 ax (UK/Ireland)

For non- 'ax' models such as Vigor2866, Vigor2866ac, Vigor 2866Lac, use a different firmware <https://www.draytek.co.uk/support/downloads/vigor-2866>

Firmware Version	4.3.2.1ax_BT (Formal Release)
Release Type	<b>Initial Release</b>
Build Date	25 <sup>th</sup> October 2021
Release Date	9 <sup>th</sup> February 2022
Revision	11160_2187_c33680ef21
Applicable Models	Vigor2866ax
DSL Modem Code	1232305
Locale	UK & Ireland Only

### First Firmware Release for this model

#### New Features

(None)

#### Improvements

(None)

#### Known Issues

1. If wireless clients are unable to access local devices such as a printer, check the hardware acceleration settings. It is possible to disable hardware acceleration for selected devices with the following CLI command:

```
ppa -E -e 1
```

```
ppa -E -a AA:BB:CC:XX:XX:XX nat|bridge|ipsec
```

---

## **Firmware File Types**

The ZIP file contains the firmware with two different file extensions, .ALL and .RST. The firmware is identical, but the RST file contains factory default settings. If you install the ALL file, your router will retain all existing settings. If you use the RST file, all settings will be wiped from your router.

## **Firmware File Types**

The ZIP file contains the firmware with two different file extensions, .ALL and .RST. The firmware is identical, but the RST file contains factory default settings. If you install the ALL file, your router will retain all existing settings. If you use the RST file, all settings will be wiped from your router.

## **Upgrade Instructions**

It is recommended that you take a configuration backup prior to upgrading the firmware. This can be done from the router's system maintenance menu.

To upgrade firmware, select '*firmware upgrade*' from the router's system maintenance menu and select the correct file. Ensure that you select the ALL file unless you want to wipe out your router's settings back to factory default.



## **Manual Upgrade**

If you cannot access the router's menu, you can put the router into 'TFTP' mode by holding the RESET whilst turning the unit on and then use the Firmware Utility. That will enable TFTP mode. TFTP mode is indicated by all LEDs flashing. This mode will also be automatically enabled by the router if there is a firmware/settings abnormality. Upgrading from the web interface is easier and recommended – this manual mode is only needed if the web interface is inaccessible.

---

**[END OF FILE]**